




Olypsys®

PLEASE STUDY THE INSTRUCTIONS ON THE NEXT PAGE.
FOR TEMPORARY USE ONLY, GET A PRE-PRINTED & CALIBRATED GRID FROM: olypsys.com/grid/

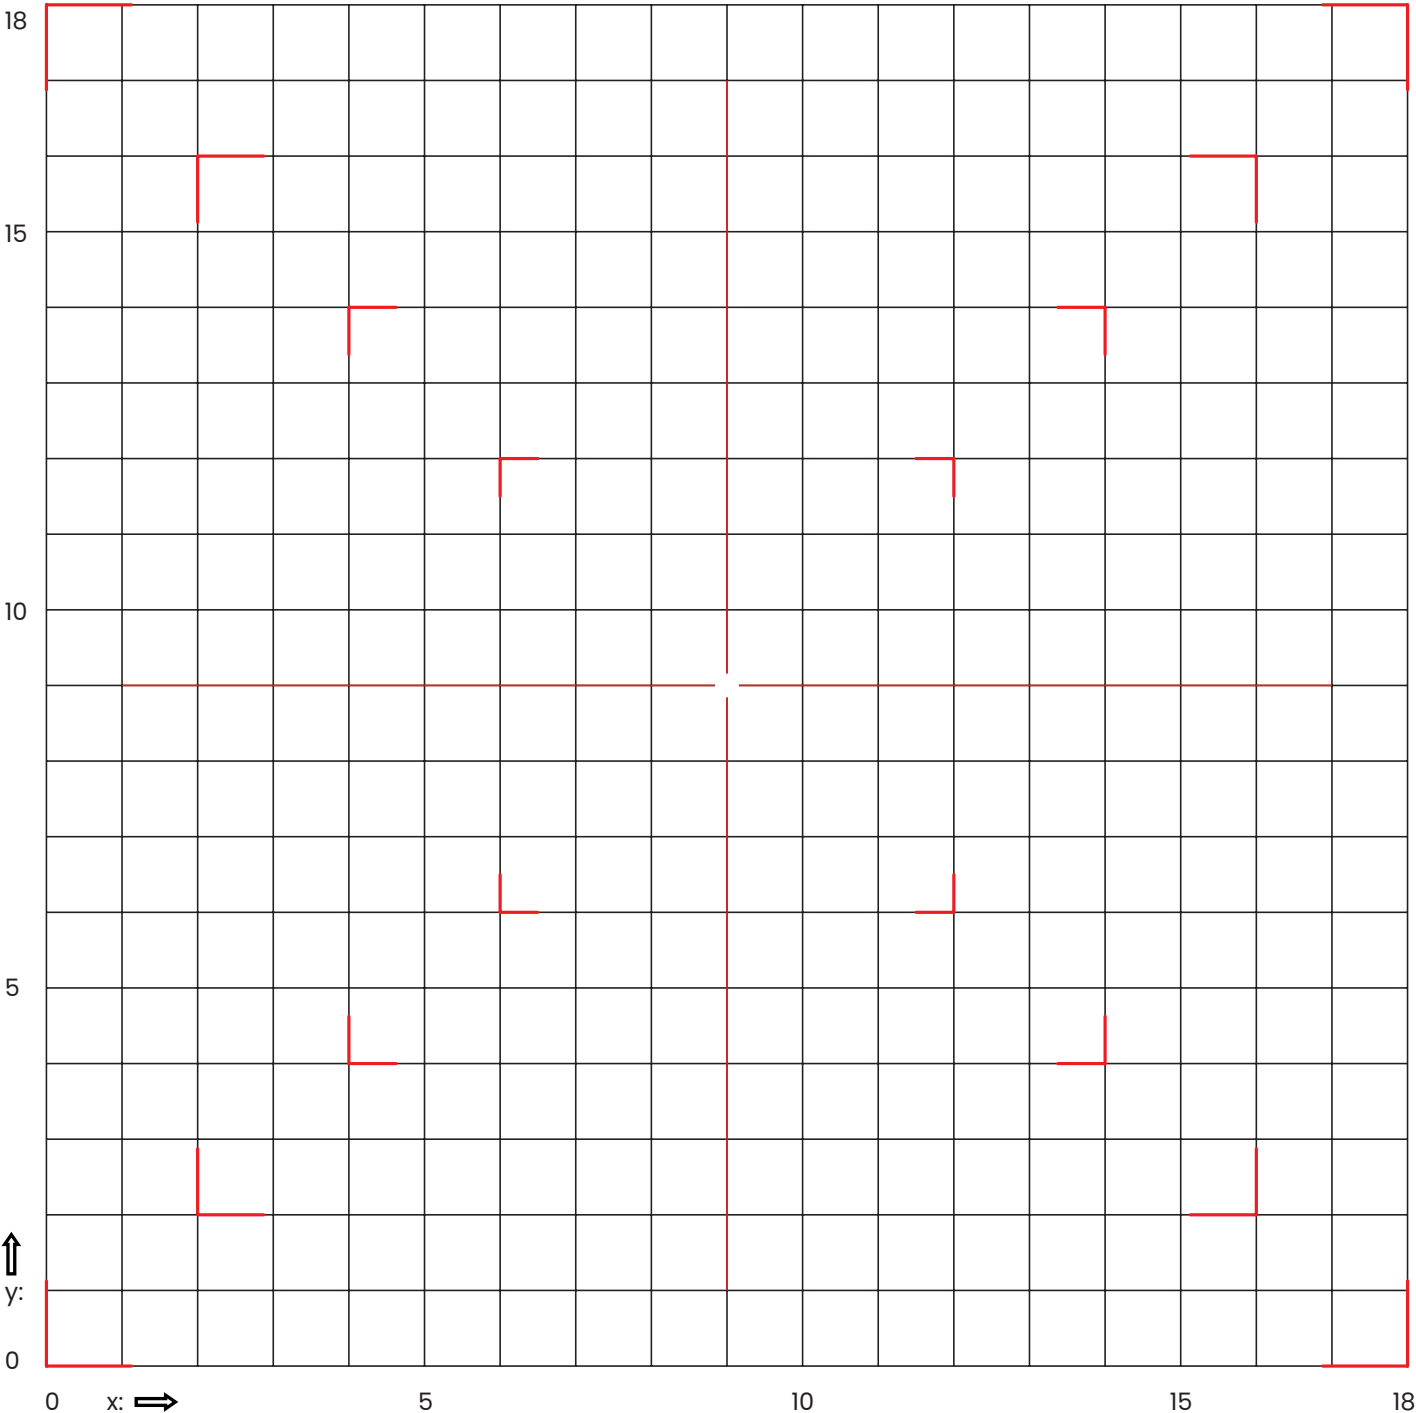

WARNING: DO NOT PHOTOCOPY! **DO NOT LAMINATE OR COVER.** **DISCARD IF CREASED OR MARKED .**

To calibrate, measure across as many squares as possible in x and y using a digital calliper, or alternatively a high quality rule.
Record in spaces to the right.
Scan QR code in the Olypsys® App and enter measurements to complete calibration.

olypsys.com



User Calibration

x:		mm across		squares
y:		mm across		squares




Olypsys®


**Fast, free & accurate
O-ring measurement**

INSTRUCTIONS


Our software compensates for imperfect images. However, to optimise your measurements, the following guide will help you perfect your technique.

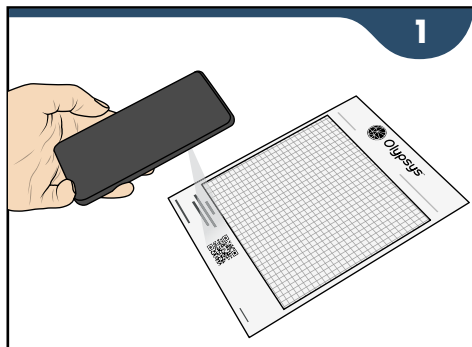


Download the Olypsys app from the App Store or Play Store. You can scan the QR code on the front of the measurement grid to get a link.

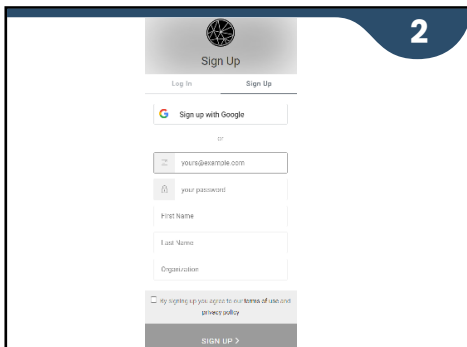


Sign up for an Olypsys account using your work email in the Olypsys app.

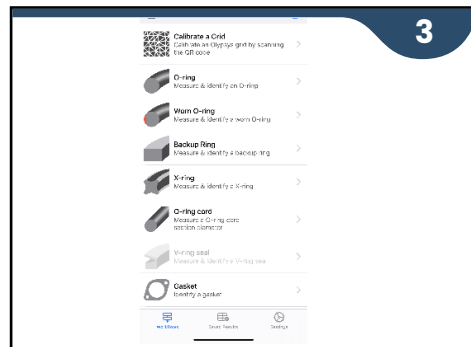


Press the "Calibrate a Grid" option in the app and scan the QR code on the front of the Grid.

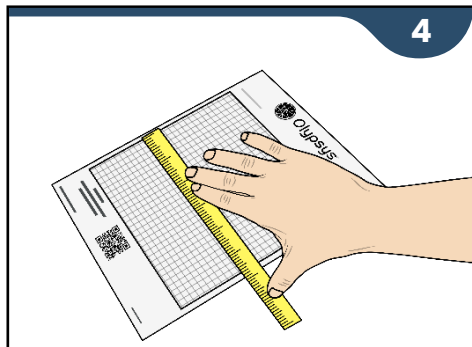

Measure accurately, using digital callipers if available, across as many squares as possible. **Most printers are not accurate, so it is essential to measure manually.** Enter the values in the app

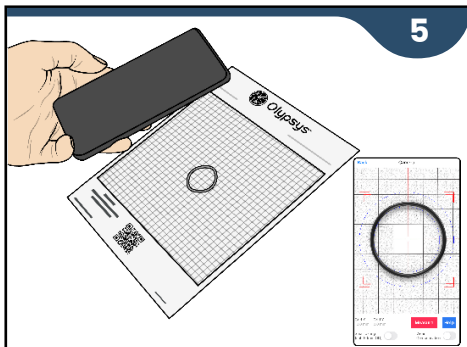

Place your O-ring flat in the middle of the grid. Hold the phone level and square-on, then take the photo in the Olypsys app.

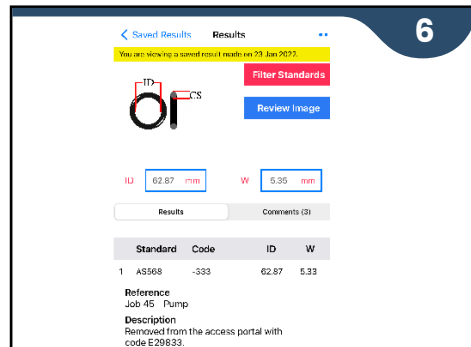


Get your results. Filter by different O-ring size standards. Save results for traceability and export using a Pro license obtainable from your Olypsys distributor.

Good Image




Good lighting, image in focus and square

Focus

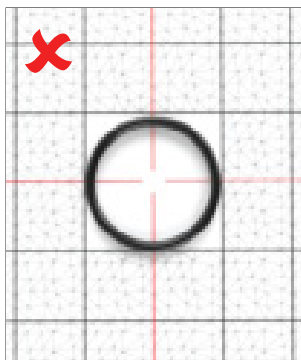


Too close to the o-ring, camera unable to focus.

Excessive Shadow

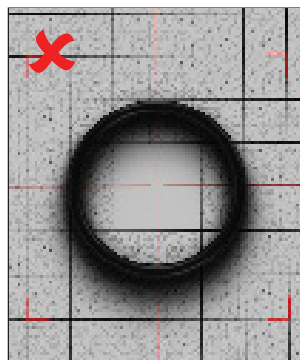

Contains excessive shadow from oblique lighting.

Too Far

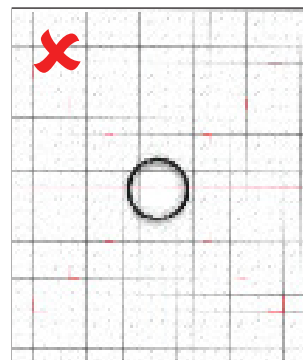

Only ideal for very small o-rings to maintain focus.

If your grid is damaged (creased, stained, distorted etc.) please request a new one.

For up to date help, visit :- olypsys.com